

Ode to Joy


 
Ludwig van Beethoven

Print this page at 100% (switch off 'fit to page'). The bar below must measure 50 mm.

Cut the strip out along its outline. Wrap it round the drum with the gear end on the right and the bottom edge at the notch on the far end of the drum, and tape the tab under the bottom edge.

Push a pin through every black dot until it stops, then tear the paper off.

The steps run upwards: the bottom row plays first. Two steps make a beat; turn the crank about once every four seconds.

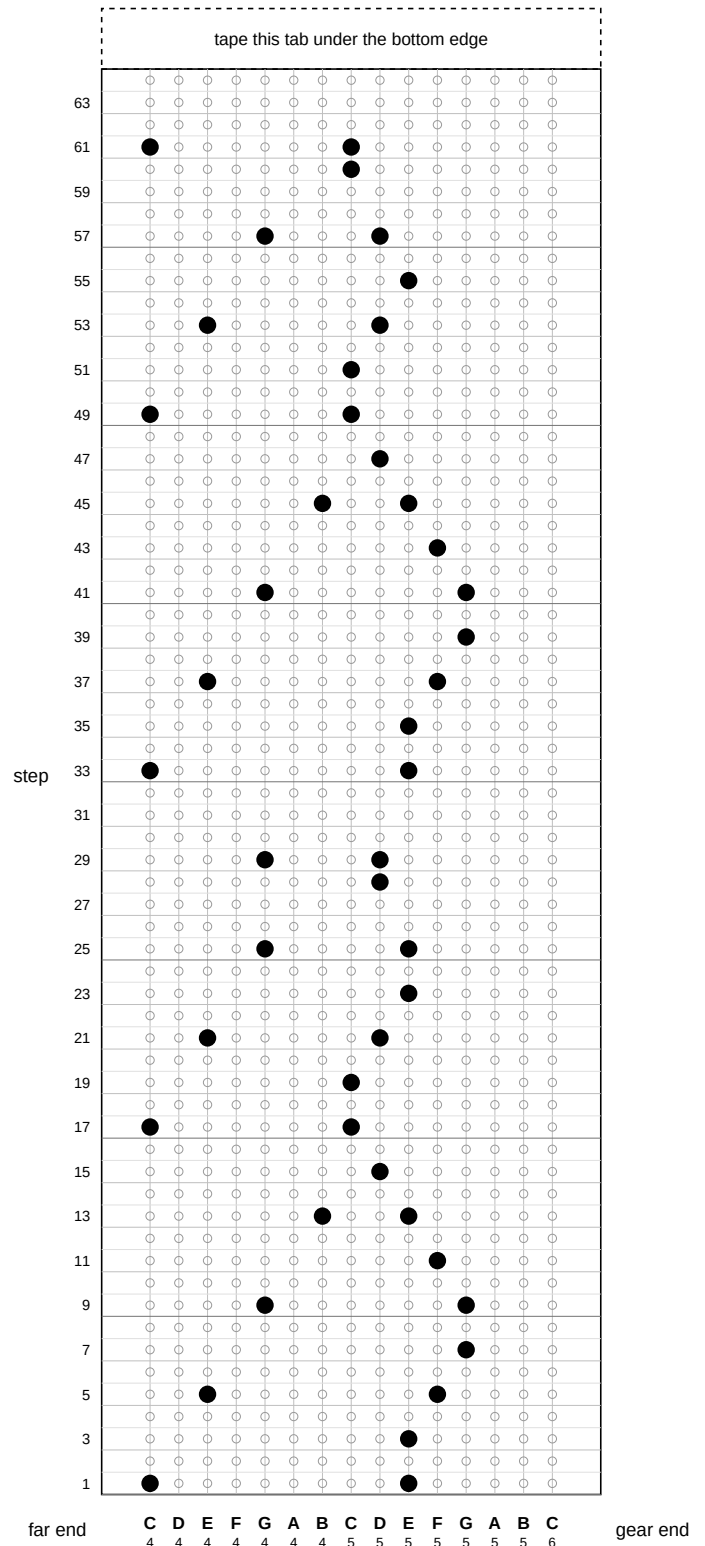

Twinkle, Twinkle, Little Star


 
Traditional

Print this page at 100% (switch off 'fit to page'). The bar below must measure 50 mm.

Cut the strip out along its outline. Wrap it round the drum with the gear end on the right and the bottom edge at the notch on the far end of the drum, and tape the tab under the bottom edge.

Push a pin through every black dot until it stops, then tear the paper off.

The steps run upwards: the bottom row plays first. Two steps make a beat; turn the crank about once every four seconds.

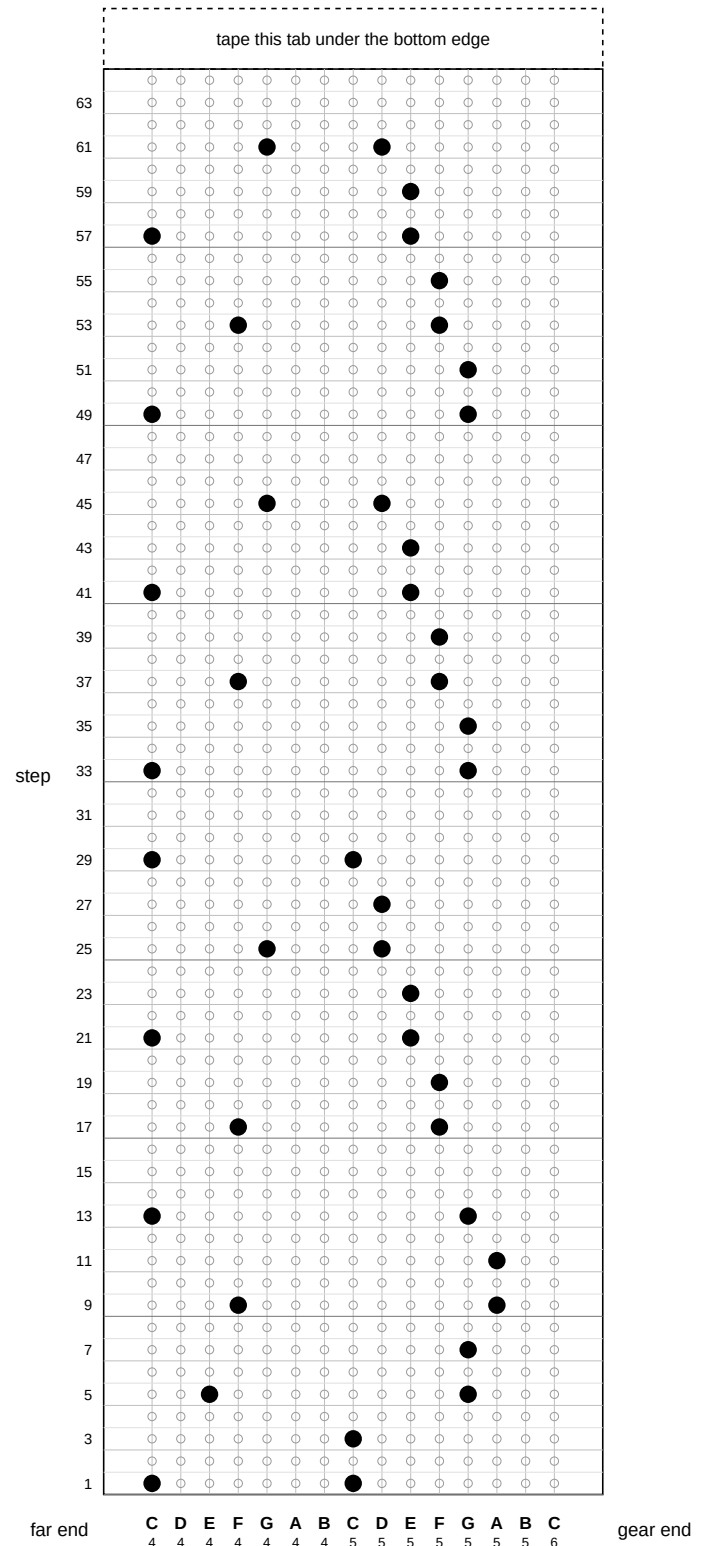

Frère Jacques (as a round)


 
Traditional

Print this page at 100% (switch off 'fit to page'). The bar below must measure 50 mm.

Cut the strip out along its outline. Wrap it round the drum with the gear end on the right and the bottom edge at the notch on the far end of the drum, and tape the tab under the bottom edge.

Push a pin through every black dot until it stops, then tear the paper off.

The steps run upwards: the bottom row plays first. Two steps make a beat; turn the crank about once every four seconds.

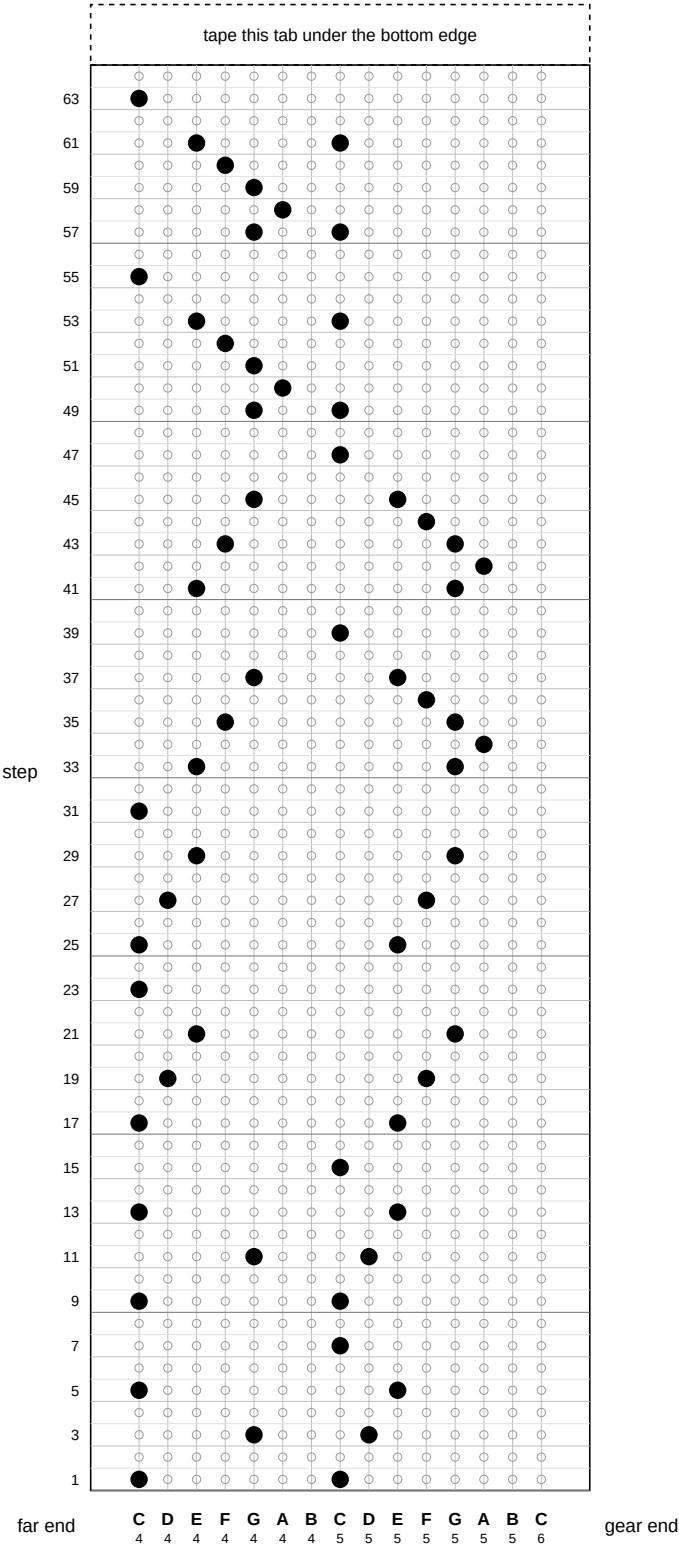

Your own tune

Mark a dot for every note, two steps to a beat. Leave a step free between two notes on the same time when you can.

Print this page at 100% (switch off 'fit to page'). The bar below must measure 50 mm.

Cut the strip out along its outline. Wrap it round the drum with the gear end on the right and the bottom edge at the notch on the far end of the drum, and tape the tab under the bottom edge.

Push a pin through every black dot until it stops, then tear the paper off.

The steps run upwards: the bottom row plays first. Two steps make a beat; turn the crank about once every four seconds.

